


jura[®]



IMPRESSA F50 / F5 / F505
Short operating instructions

First use



- Press power switch (I) (on rear)
- Fill bean tank
- Press ON / OFF key 




Display text: **LANGUAGE ENGLISH**

- Turn the Rotary Switch until the required language is displayed
- Confirm selected language by pressing the Rotary Switch
- Lift out water tank
- Fill water tank and place back into the machine




Display text: **OPEN TAP**

- Place a receptacle under the Professional Cappuccino Frother
- Turn tap to position 
- Turn it back to the initial position when display prompts you to do so



Display text: **PRESS RINSE**

- Place receptacle under height-adjustable coffee spout
- Press maintenance key  when display prompts you to do so

The machine is ready for use

Insert filter (first use)



- Remove water tank and empty it
- Flip up cartridge (1) holder
- Insert filter cartridge (2) into water tank, applying slight pressure
- Close cartridge holder (1) (engages audibly)
- Fill water tank and insert




- Hold programming key P down until the display shows **FILTER**



- Confirm setting by pressing the Rotary Switch
- Turn Rotary Switch until the display shows **YES**
- Confirm setting by pressing the Rotary Switch




- Place a receptacle (at least 0.5 litre) under the Professional Cappuccino Frother
- Turn tap to position 
- Turn it back to the initial position when display prompts you to do so

The machine is ready for use


Cleaning (duration: approx. 15 minutes)



Display text: **READY CLEAN**


- Press maintenance key  down until the display shows **EMPTY TRAY**
- Empty drip and grounds tray and place back into the machine



- Remove drip tray
- Place a receptacle (approx. 1 litre) under the coffee spout
- Press maintenance key 



Display text: **FILL TABLET**

- Open funnel cover for pre-ground coffee powder
- Drop in JURA cleaning tablet and close cover
- Press maintenance key 



Display text: **EMPTY TRAY**

- Empty drip and grounds tray and place back into the machine
- Wipe out filler funnel for ground coffee with a dry cloth after the cleaning program has finished.



The machine is ready for use

Changing the filter

After having used 50 litres of water or after two months at the latest, the filter cartridge will be used up.




Display text: **READY / FILTER**

- Switch machine off using the ON / OFF key 
- Press maintenance key  until the display shows **CHG FILTER OPEN TAP**



- Remove and empty water tank
- Flip up cartridge holder (1)
- Remove old CLARIS plus filter cartridge from the tank
- Place new filter cartridge (2) into water tank, applying slight pressure
- Close cartridge holder (1) (engages audibly)
- Fill water tank and place back into machine





- Place a receptacle (at least 0.5 litre) under the Professional Cappuccino Frother
- Turn tap to position 
- Turn it back to the initial position when display prompts you to do so

The machine is ready for use

Decalcifying (duration: approx. 40 minutes)



Display text: **DECALCIFY**


- Switch machine off using the ON / OFF key 
- Hold maintenance key  down until the display shows **EMPTY TRAY**
- Empty drip and grounds tray and place back into machine
- Carefully remove the Professional Cappuccino Frother



Display text: **AGENT IN TANK**

- Remove water tank and empty it
- Completely dissolve contents of a blister (3 tablets) in 0,5 litres of water
- Pour solution into the empty water tank
- Place water tank back into machine



- Place a receptacle (at least 0.5 litre) under the spout
- Turn tap to position 

Display text: **DE-SCALING**

- Turn it back to the initial position when display prompts you to do so

Decalcifying (continuation)




Display text: **EMPTY TRAY**

- Empty drip tray and reinsert
- Rinse water tank well, fill with cold, fresh tap water and place it back into the machine




Display text: **OPEN TAP**

- Place receptacle under spout
- Turn tap to position 
- Turn it back to the initial position when display prompts you to do so



Display text: **EMPTY TRAY**

- Empty drip tray and reinsert
- Reassemble the Professional Cappuccino Frother
- Shift receptacle under height-adjustable coffee spout
- Press maintenance key 

The machine is ready for use

Rinsing the Professional Cappuccino Frother



To ensure perfect function, the Professional Cappuccino Frother should be rinsed regularly.

- Dismantle the Professional Cappuccino Frother into its individual parts
- Thoroughly rinse all parts of the nozzle under running water
- Reassemble the Professional Cappuccino Frother

Cleaning the Professional Cappuccino Frother



To ensure perfect function, the Professional Cappuccino Frother should be cleaned regularly

- Place a receptacle under the Professional Cappuccino Frother
- Fill a second receptacle with 2.5 dl of fresh water and add a capful of Auto-Cappuccino Cleaner
- Dip the milk pipe into the second receptacle with the Auto-Cappuccino Cleaner
- Draw steam until the receptacle with the Auto-Cappuccino Cleaner is empty



- Fill the receptacle with 2.5 dl of fresh water
- Dip the milk pipe into the receptacle with the fresh water
- Draw steam until the receptacle with the fresh water is empty
- Cleaning of the Professional Cappuccino Frother is complete

The machine is ready for use